



Triton Blue

USER MANUAL
MANUAL DE USUARIO

Laser TR2-64



Read kindly this user manual before using the machine
Lea atentamente este manual antes de utilizar el aparato



Triton Blue

USER MANUAL

Laser TR2-64



English

Following is a guide to installing your new LASER CHROMA 100mW LDRGY projector. Please remember that due care and attention should always be taken when working with electricity. We recommend that your projector be installed by a professional installer and a licensed Electrician.

INTRODUCTION 1

Thank you for purchasing this laser product. You can be assured that you have made an investment into the highest quality laser products available today.

You can be confident that our quality and after sales service is equal to our status of being the global leader in entertainment lighting and laser products.

SAFETY INFORMATION

Warning! This product is for professional use only. It is not for household Use.

This product presents risks of lethal or severe injury due to fire and heat, electric Shock, and or laser related injuries. Read this manual before powering or installing the projector, follow the safety precautions listed below and observe all warnings in this manual and on the projector. If you have questions about how to operate the projector safely, please contact your Triton Blue reseller.

To protect yourself and others from electric shock

- Disconnect the fixture from AC power before removing or installing the projector, fuses, or any part service.
- Always ground (earth) the projector electrically. Failure to do so may damage your projector.
- Use only a source of AC power that complies with local building and electrical codes and has both overload and ground-fault protection.
- Do not expose the projector to rain or moisture.
- No user serviceable parts inside.

To protect yourself and others from potential laser radiation hazards

.Never operate the projector with missing or damaged covers.

- Do not stare directly into the aperture whilst it is projecting a beam.
- Do not open the projector housing to adjust any components.
- This projector contains housing safety interlocks. Opening the housing will defeat the interlocks and cause the laser output to stop.

To protect yourself and others from burns and

fire

- Do not place any part of your body in the beam path whilst projecting a stagnant beam.
- Never attempt to bypass the fuses. Always replace defective fuses with ones of the specified type and rating.
- Keep all combustible materials (for example fabric, wood, paper) at least 0.3 meters (12 inches) away from the projector. Keep flammable materials well away from the projector.
- Provide a minimum clearance of 0.1 meters (4 inches) around fans and air vents.
- Never place filters or other materials over the aperture.
- Do not modify the projector in any way.

To protect yourself and others from injury due to falls

- When suspending the projector above ground level, verify that the structure can hold at least 10 times the weight of all installed devices.
- Verify that all external covers and rigging hardware are securely fastened and use an approved means of secondary attachment such as a safety cable.
- Block access below the work area whenever installing or removing the projector.

UNPACKING

The packing material is carefully designed to protect the projector during shipment - always use it to transport the projector. The Projector comes with:

- One 3m, 3-pin IEC mains cable.
- One 1m DMX Cable
- One Installation Manual

Carefully open the top of the shipping carton. Firmly grasp the yoke and lift the unity out of the carton. Taking care to avoid reaching into the front of the unit, where the optics are, remove the foam blocks from both ends of the projector and carefully place it on a flat, stable surface for inspection. Visually inspect the projector to ensure it did not receive any damage during shipping. Verify that the yoke is attached firmly with two bolts and two knobs. Always use a safety cable when hanging any lighting fixture or effect from truss or overhead fixing point. At this time affix your safety cable and stage clamps.

AC POWER 2

Warning! For protection from electric shock, the projector must be grounded (earthed). The power supply shall have overload and ground-fault protection. Important! Install fuse and verify that power supply settings match local AC supply before use.

To install the main fuse

Use only the fuse specified for the operating voltage.

1. Turn of power mains to the projector.
2. Remove the fuse holder and insert the fuse in the fuse holder.
3. Insert the fuse holder in the empty slot in the mains input socket.

To install a plug on the power cable

If you need to replace the power plug, it must be fitted with a grounding-type cord cap that fits your power distribution system. Consult an electrician if you have any doubts about proper installation.

Following the cord cap manufacturer's instructions, connect the yellow and green wire to ground (earth), the brown wire to live, and the blue wire to neutral. The table below shows some pin identification schemes.

Table 1: Cord cap connections

Wire	Pin	Marking	Screw color
brown	Live	"L"	yellow or brass
blue	Neutral	"N"	silver
yellow/green	Ground		green

How to Earth the power supply

Warning! The power supply used to power the projector and the computer requires earthed power mains. All power cables used in the installation of the projector and the computer are to be earthed. Important! Powering projector and the computer unearthed will damage the projector and or computer.

Before installing your projector or computer, you must do the following to ensure

it is safe to connect the power supply.

- Test power supply to both the projector and the computer. Do this using a Multi-Meter capable of testing up to 750VAC
- Test continuity between both ends of the power supply cables. Ensure that all three wires have continuity.

If you find that you have an unearthed power supply, you will need to connect an earth before installing the projector. We recommend that you contact either a Triton Blue Technician or a Licensed Electrician to do this. Alternatively, at your own risk, you can follow the instructions below to install an Earth connection.

1. Find a copper water mains pipe or a 2 to 3 meter copper rod. If using a copper rod, drill the rod into the ground outside of the building so that you have no more than 10 to 15 cm exposed.
2. Inside the main Distribution Box connect a copper plate on the inside of the chassis.
3. Run and connect a 1 gauge cable from the copper plate on the inside of the Distribution Box to the Copper Water Mains Pipe or the Copper rod.
4. Test the earth by using a Multi-Meter in 750VAC mode from the hot (Brown) to the earth and then the Neutral (Blue) to the earth. The total between the two should equal the total shown when you connect the prods between hot and Neutral. If not, cease further use and contact a licensed electrician. Once you have completed this correctly you can apply power to your Projector and computer using the Earthed power source.

To apply power

Warning! The power cables must be undamaged and rated for the electrical requirements of all connected devices. Important! Powering through a dimmer system will damage the projector and computer.

1. Connect the prepared cable to the mains input socket and the AC mains distribution system. **Do not** connect the projector.
2. Using the on / off switch located at the rear of the projector, turn the projector on.
3. You now can continue with the installation of your new laser projector.

INSTALLATION 3

LOCATION AND ORIENTATION

For safe operation, install the Projector in a location where: -

- It is at least 0.3 meters (12 inches) away from illuminated surfaces and combustible materials.
- It is not easily touched or bumped.
- It is protected from rain and moisture.
- There is at least 0.1 meters (4 inches) clearance around the fans and air vents.
- There are no flammable materials nearby. The projector may be installed in any orientation as described below or placed directly on a stage or floor. The intense light can burn or melt parts within a distance of 0.3 meters (12 inches).

When installing the projector next to a fixture, avoid illuminating the projector.

Truss or other overhead mounting

WARNING! Ensure the safety Cables are secured to the safety anchor points at the side of the projector.

1. Block access below the work area.
2. Working from a stable platform.
3. Attached the safety cable that can bare at least 10 times its weight, through the safety cable anchor point on the of the projector. Ensure to place the projector on a raised platform, if working above 1.5m.
4. A clamp can be used to hang the projector from a truss or similar. Triton Blue offers a range of optional Clamps and truss mounting components.

Operating Instructions **4**

CAUTION: Use of controls, adjustments, or performance of procedures other than what is specified herein may result in hazardous radiation exposure which can result in server eye damage and or physical injury

This projector is designed to Operate using DMX-512. DMX-512 allows you to control the Projector using any DMX-512 Protocol controller, however a profile will need to be created for some controllers. By following these simple instructions below, you will be able ensure a safe enjoyable show using your new projector.

Compliance Statement

Compliance Statement Your new TR2-64 Projector has been designed to comply with FDA and IEC Standards for it classification. The TR2-64 Projector, is a Class IIIB laser product.

Laser Safety and Compliance Information

This product is manufactured to comply with the IEC 60925-1 and in accordance with U.S. Food and Drug Administrations (FDA) Standards Listed under FDA Document 21 CFR 1040 and subsequent laser notices.

Product Classification and Manufacturing Label Identification

Laser Classification: Class IIIB

Laser Medium:

Red >60mW LD 650nm

Green >40Mw DPSS 532nm

Output: 100Mw TRI-COLOR

Cooling: TE Cooling

CAUTION: AVOID EXPOSURE TO BEAM: Avoid direct eye contact with laser light. Never intentionally expose your eyes or others to direct laser radiation.

As you can see, from dipswitch 3, the numbers increase by multiplying the previous value by 2.

A Combo label with the Product Model Number, Serial Number, Date of Manufacture, Laser Light Warning Label, Warranty Void Label and Interlocked Housing Label



This laser product is a ClassIIIB laser and has an Interlocked housing.

This projector has been designed to be hung from a truss, ceiling or on a wall. It is recommended that, for safety purposes, your projector be mounted using either a suitable hanging clamp or bolted to the surface as instructed in this manual. Triton Blue offers a range of items, which are ideal for safe mounting. It is the responsibility of the manufacture to provide useful instruction on the proper use of this product. According to FDA Regulations you should operate this product in the fashion illustrated to the left.

There are no user serviceable parts inside. tampering or removing warranty seals will void your products limited warranty.

CAUTION: AVOID EXPOSURE TO BEAM: Avoid direct eye contact with laser light. Never intentionally expose your eyes or others to direct laser radiation.

As you can see, from dipswitch 3, the numbers increase by multiplying the previous value by 2.

A Combo label with the Product Model Number, Serial Number, Date of Manufacture, Laser Light Warning Label, Warranty Void Label and Interlocked Housing Label



There are no user serviceable parts inside. tampering or removing warranty seals will void your products limited warranty.

CAUTION: AVOID EXPOSURE TO BEAM: Avoid direct eye contact with

laser light. Never intentionally expose your eyes or others to direct laser radiation.

As you can see, from dipswitch 3, the numbers increase by multiplying the previous value by 2.

A Combo label with the Product Model Number, Serial Number, Date of Manufacture, Laser Light Warning Label, Warranty Void Label and Interlocked Housing Label



A Combo label with the Product Model Number, Serial Number, Date of Manufacture, Laser Light Warning Label, Warranty Void Label and Interlocked Housing Label



Proper Usage Safety and Compliance Information

This projector has been designed to be hung from a truss, ceiling or on a wall. It is recommended that, for safety purposes, your projector be mounted using either a suitable hanging clamp or bolted to the surface as instructed in this manual. Triton Blue offers a range of items, which are ideal for safe mounting. It is the responsibility of the manufacture to provide useful instruction on the proper use of this product. According to FDA Regulations you should operate this product in the fashion illustrated to the left.


There are no user serviceable parts inside. tampering or removing warranty seals will void your products limited warranty.

CAUTION: AVOID EXPOSURE TO BEAM: Avoid direct eye contact with laser light. Never intentionally expose your eyes or others to direct laser

radiation.

As you can see, from dipswitch 3, the numbers increase by multiplying the previous value by 2.

A Combo label with the Product Model Number, Serial Number, Date of Manufacture, Laser Light Warning Label, Warranty Void Label and Interlocked Housing Label

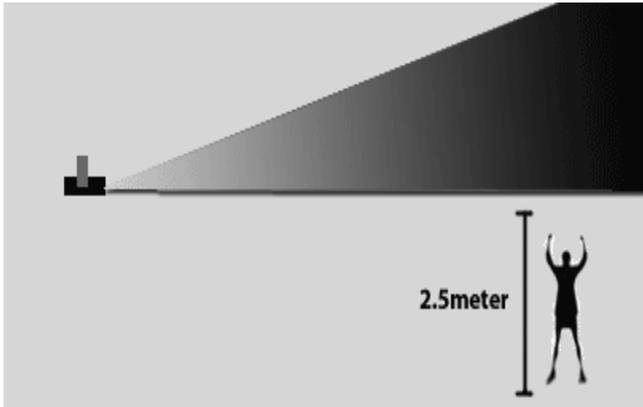

There is only one laser aperture on this product.



CAUTION: The use of corrective eye wear or optics for viewing at distances such as telescopes or binoculars with in a distance of 100mm may pose an eye hazard.

DMX Control 5

Control features

Your projector is capable of being controlled in three modes, DMX-512, Sound Active (Master/Slave), and Stand Alone. Additionally the projector is capable of Remote Sound Activation and Remote Laser On/Off, which can be done from the DMX-512 controller. The projector has over 300 areial effects which can be triggered by all of the above control modes.

Creating a Projector Profile

Your new LC series projector utilizes DMX-512 signal to communicate with the controller. DMX-512 is Industry standard and can be found in some lighting control consoles as well as some software based lighting controllers. Each LC series projector is capable of being individually addressed, so that you can control more than one projector independently. Below are is the DMX profile settings used by the TR2-64 projector. **NOTE: Some Software based DMX controllers already have the TR2-64 profile. Usually fixtures are listed under the manufactures name. This projector is listed under Triton Blue.**

CHANNEL	FUNCTION	VALUE	DESCRIPTION
CH 1	MODE	1~10	LASER OFF, LASER AND SCANNER STOP WORKING
		11~120	DYNAMIC PATTERNS
		121~250	STATIC PATTERNS
		251~255	STATIC PATTERNS
CH 2	PATTERN SELECTION	0~255	NUM N STATIC / DYNAMIC
CH 3	POSITION-X	0~255	ADJUST POSITION-X
CH 4	POSITION-Y	0~255	ADJUST POSITION-Y
CH 5	SCANNING SPEED	0~255	0 IS FAST, 255 IS SLOW
CH 6	DYNAMIC PATTERN PLAY SPEED	0~255	0 IS FAST, 255 IS SLOW
CH 7	STATIC PATTERN SIZE	0~255	0 IS FAST, 255 IS SLOW
CH 8	COLOR SELECTION	0~13	RED, GREEN, BLUE, YELLOW, PURPLE CYAN AND WHITE MONOCHROMATIC LASER TO BE SELECTED.
		14~243	121 COLORS COMBINATION
		244~255	MULTICOLOR
CH 9	COLOR SEGMENT	0~255	DMDE INTO 1 TO 51 SEGMENT

Connecting your projector to a DMX-512 Controller

DMX-512 uses a three pin cable similar to XLR or Mic leads. We recommend that you use DMX designated cables only as the use of XLR or Mic Leads can affect the operation of your projector.

1. Determine the length required to run between the projector and the controller.
2. Using DMX Cable, connect the male end to the controller and the female to the projector.
3. Address your projector accordingly so that it corresponds with projector's profile address on your controller.
4. Apply power to both the controller and projector. You are now able to control the projector via your controller.

Dip Switch Settings

This projector uses dipswitches to assign the desired DMX address. DMX-512 is a simple to use control protocol that allows you to control up to 512 channels at any one time. The LASER CHROMA 100Mw LDRGY Projector uses 7 Channels to control its functions. In order to communicate with the projector you will need to assign a start address for the first channel of the projectors profile. To do this we use the dipswitch located at the rear of the projector to. Dipswitches 1 to 9 represent numbers between 1 and 512. E.G. dipswitch one equals 1, dipswitch two equals 2, Dipswitch three equals 4 and so on up to dipswitch nine which equals 256. To assign an address you can simply follow this DMX binary Chart on the next page.

An easy way to remember the value of each switch, simply follow the following logical mathematical riddle.

Dipswitch No.

As you can see, from dipswitch 3, the numbers increase by multiplying the previous value by 2.

A Combo label with the Product Model Number, Serial Number, Date of Manufacture, Laser Light Warning Label, Warranty Void Label and Interlocked Housing Label

1	$1 \times 1 = 1$
2	$2 \times 1 = 2$
3	$2 \times 2 = 4$
4	$4 \times 2 = 8$
5	$8 \times 2 = 16$
6	$16 \times 2 = 32$
7	$32 \times 2 = 64$
8	$64 \times 2 = 128$
9	$128 \times 2 = 256$

You will also notice dipswitch numbers 10, 11, and 12. These are used to select between the following modes: -

- SOUND ACTIVE MODE
- AUTO MODE
- MASTER-SOUND
- MASTER-AUTO
- SLAVE
- DMX MODE
- TEST MODE

Depending on how you wish to control your projector, you will need to assign the correct dipswitch address according to the chart below.

0 = OFF 1 = ON X = OFF OR ON

DIPSWITCH CHART												FUNCTION
1	2	3	4	5	6	7	8	9	10	11	12	
X	X	X	X	X	X	X	X	X	0	0	0	SOUND ACTIVE
X	X	X	X	X	X	X	X	X	0	0	1	AUTO MODE
X	X	X	X	X	X	X	X	X	0	1	0	MASTER-SOUND
X	X	X	X	X	X	X	X	X	0	1	1	MASTER-AUTO
X	X	X	X	X	X	X	X	X	1	0	0	SLAVE
SET DMX ADDRESS									1	0	1	DMX MODE
X	X	X	X	X	X	X	X	X	1	1	0	TEST MODE


Trouble Shooting **6**

PROBLEM	REASON	TROUBLE SHOOTING
	No Power	Turn on the power at mains
Unit does not Respond to DMX	DMX ADDRESS	Ensure you are sending signal to the fixture
	Fuse	Check that the fuse is in tact and serviceable
Erratic output	DMX CABLE	Check to see that a proper connection between control and the fixture a is constant
		Individually check each cable for continuity on all three pins
		Check polarity of DMX cable
	Poor signal from Control	Check DMX cables, Check control DMX selection switch if one is present
	DMX ADDRESS OFFSET	Reassign DMX address via dipswitches
	Loose USB cable	Remove and re-insert cable
Laser appears dim	Dirty optics	Clean optics
	Under ILDA	Check palette in pangolin
	Via USB control	Check that fade is at 100%

Cleaning the optics 7

One of the most critical components in a Laser projector is the optics. If the optics are dirty, you will experience a loss in power output. To ensure that your projector outputs at its maximum power follow these simple instructions illustrated below. It is advised that you do this on a regular basis, especially if the projector is installed in a location which is subject to large amounts of dust.

NOTE: Do not use any coarse materials such as newspaper to clean the optics. This will scratch the surface and ultimately will lead to loss in power output.

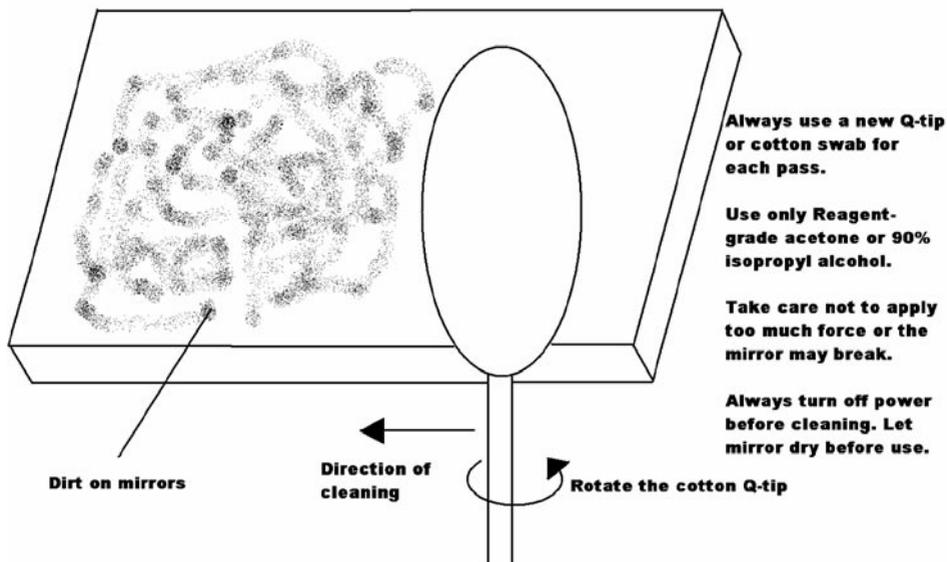

Technical Specifications

8

Model: LASER TR2-64 projector

Laser Type: LASER DIODE Laser Life: 6,000 to >10,000 Hours

Output Type: CW

Cooling: TEC Thermal Electronically Cooled


Color: 650nm Red, 532nm Green

Output: As Designated by Model

Modulation: Analog

AC Power: 220VAC 60Hz / 110VAC 50Hz Optional

Consumption: 2.5A to 5A



Triton Blue Product lighting
www.triton-blue.com
info@triton-blue.com